



2710

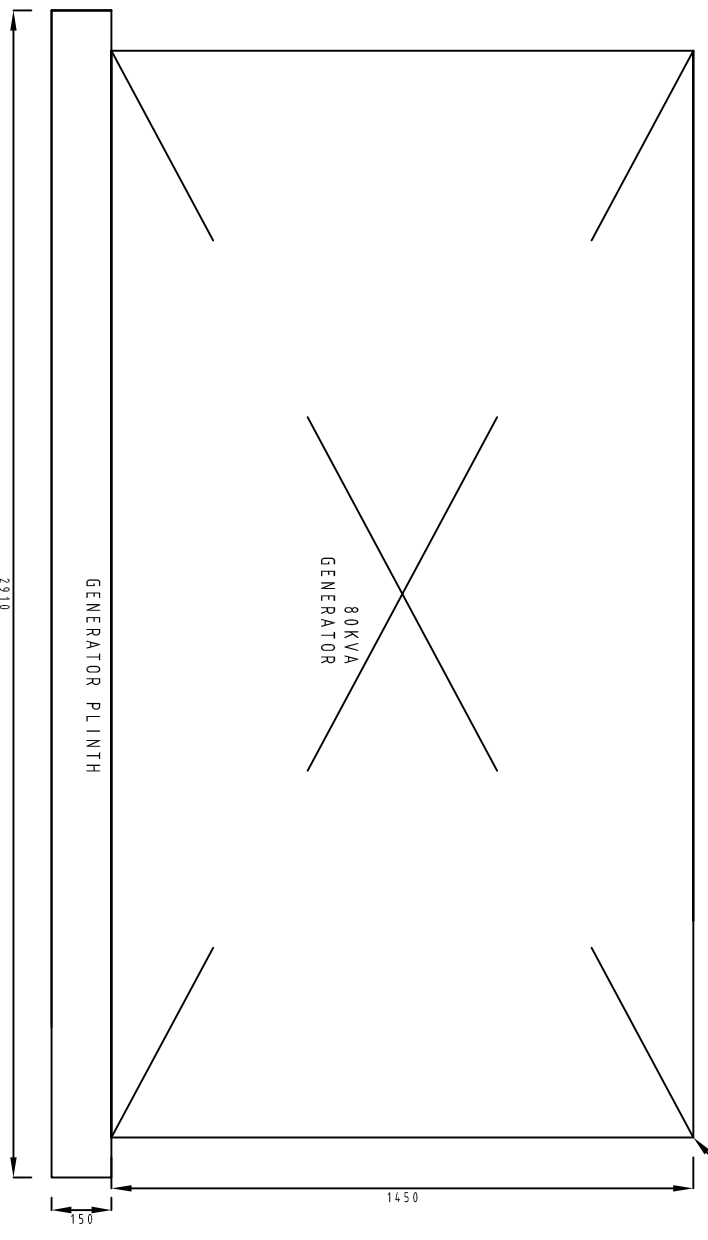


GENERATOR ON PLINTH

1000

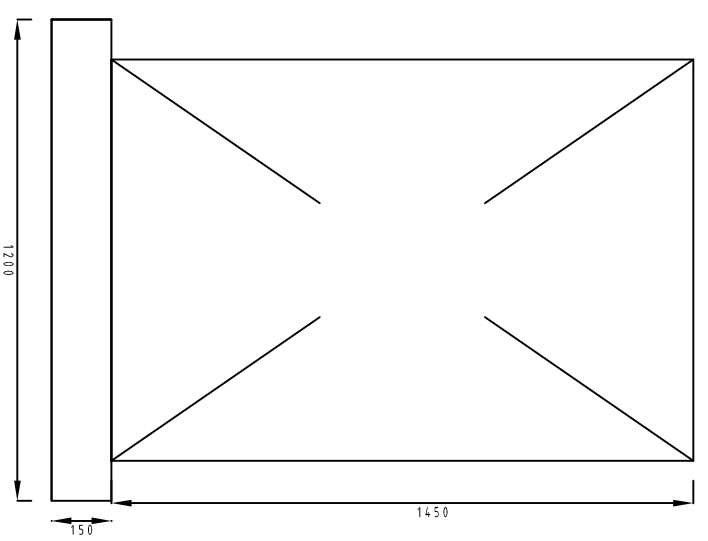

2910

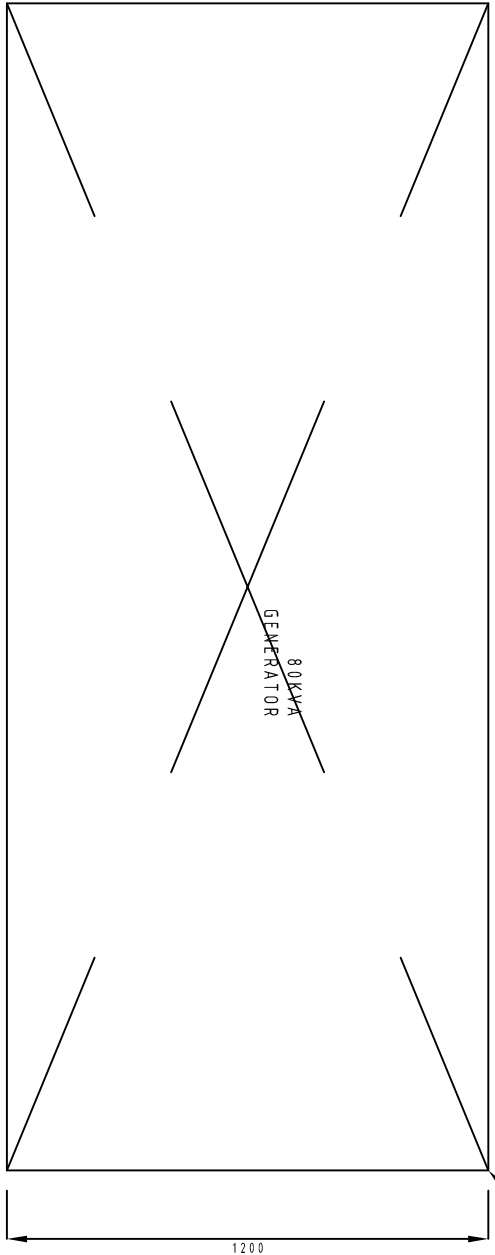

GENERATOR PLINTH

**Note**  
 The concrete plinth needs to be a minimum 30MPa concrete either vibrated or with 193 mesh, 50mm from the top.  
 The generator should be situated 800mm away from walls at all sides for ventilation & service purposes.

# GEN-TEK

POWERED GENERATOR SOLUTIONS

Gen Motion Ltd Trading as GEN TEK  
 101 Derby Rd Judiths Paarl JHB 2000  
 Tel +27 11 627 7550 Fax +2711 614 5641  
 Website www.gen-tek.co.za E-mail sales@gen-tek.co.za

**ELECTRICAL NOTES:**

Rev	Description	Date
1	GENERATOR PLINTH	

**PROJECT TITLE:**

**DRAWING Title:**

THIS IS AN AUTOCAD GENERATED DRAWING

80KVA GENERATOR  
 PLINTH DETAIL

DRAWING No.  
**E 100**

REVISION:  
**1**

DATE:  
 SCALE:  
 DESIGNED:  
 DRAWN:  
 CHECKED: